




*"Simply Better"*

SKIRTEC GROUP PTY LTD  
 ACN 074 107 805  
 TEL 07 3375 6144  
 FAX 07 3375 6033  
 Email sales@skirtec.com.au  
 HELP LINE 1800 064 435

## INSTALLATION INSTRUCTIONS

### SKIRTEC 2 CHANNEL BENCH DUCT ABD12535

1. Ensure all surfaces to which the duct is to be mounted on are level and straight.
2. Fix base sections to wall / bench using the score lines in both top & bottom channels.
3. Adjoining duct sections can be aligned by using the clipped on cover across the joints.
4. To insert outlet mount boxes where required, cut the barrier to size down to the score line and snap off with snips (Skirtec recommends the use of Wiss Offset snips, M7). Mount Boxes can be inserted adjacent to each other and still maintain segregation. Straighten any distorted barrier section using pliers.
5. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets.

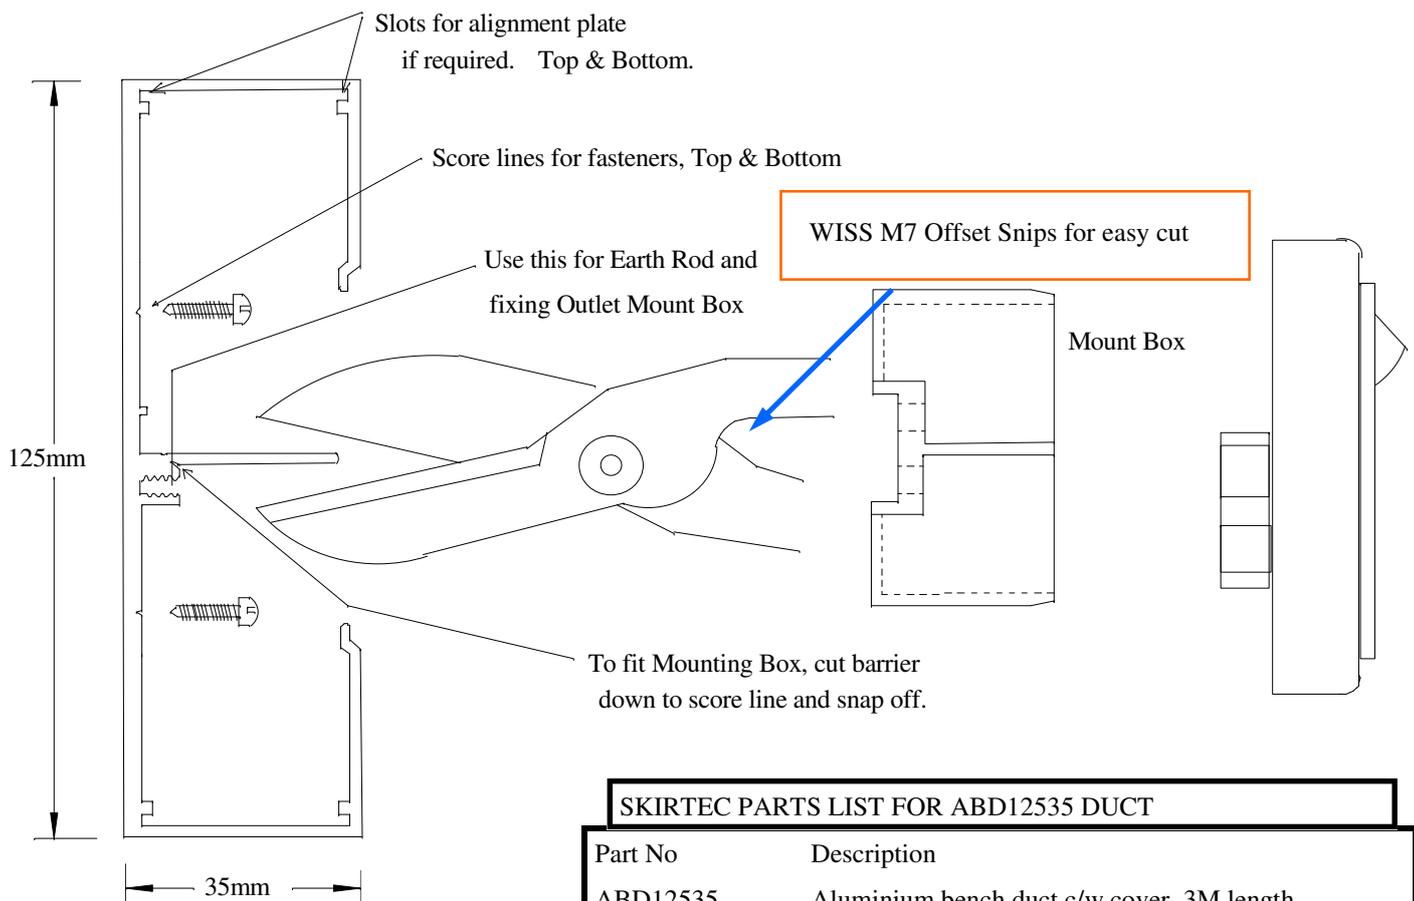

#### SKIRTEC PARTS LIST FOR ABD12535 DUCT

Part No	Description
ABD12535	Aluminium bench duct c/w cover, 3M length
ABD12535-MT	Outlet kit for standard grid plate (1) data or GPO
ABD12535ES	End Stop for bench duct, left or right.
ABD12535CNR	Corners (recommended only needed for externals)
SET UP	Powdercoat set up fee for Special Colours
Colours	Stock colours, clear anodised, grey, white birch, black




*"Simply Better"*

SKIRTEC GROUP PTY LTD  
ACN 074 107 805  
TEL 07 3375 6144  
FAX 07 3375 6033  
Email sales@skirtec.com.au  
HELP LINE 1800 064 435

## INSTALLATION INSTRUCTIONS

### SKIRTEC 2 CHANNEL BENCH DUCT ABD10050

1. Ensure all surfaces to which the duct is to be mounted on are level and straight.
2. Fix base sections to wall / bench using fasteners along each side of the mounting channels at intervals of approximately 450mm. Liquid nails may also be used to increase mounted stability.
3. Butt base sections together ensuring alignment continuity of segregation channel and mounting channel. To bond adjoining base sections, use earth continuity rod provided in short sections squeezed into the mounting channel section of the base (important – do not use segregation channel as this is required to achieve continuous segregation).
4. It is recommended that mount boxes are installed into chosen positions before the duct is segregated. Insert outlet mount boxes where required, with openings turned towards the appropriate cable channel (top or bottom), fastening to mounting channel using fasteners provided. Mount Boxes inserted adjacent to each other maintain segregation.
5. Measure off distances between mount boxes and cut and clip into place segregation as shown in the drawing below. If required installed segregation may be removed by snapping out of position as shown or alternatively, for small sections (the length of a mount box only), by cutting down to the mounting channel and drilling out the enclosed foot and snapping out the small section.
6. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets and butting cover under the outlet plate (fully covering cover ends).

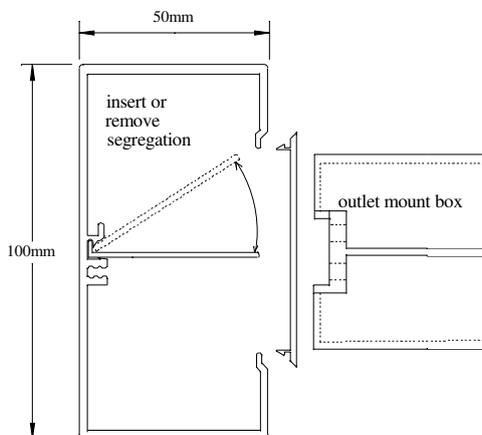

#### SKIRTEC PARTS LIST FOR ABD10050 DUCT

Part No	Description
ABD10050	Aluminium bench duct c/w cover, 3M length
ABD10050-MT	Outlet kit for standard grid plate (1) data or GPO
ABD10050ES	End Stop for bench duct, left or right.
ABD10050CNR	Corners (recommended only needed for externals)
SET UP	Powdercoat set up fee for Special Colours
Colours	Stock colours, clear anodised, grey, white birch, black