




"Simply Better"

SKIRTEC GROUP PTY LTD
ACN 074 107 805
TEL 07 3375 6144
FAX 07 3375 6033
Email sales@skirtec.com.au
HELP LINE 1800 064 435

INSTALLATION INSTRUCTIONS

SKIRTEC 2 CHANNEL BENCH DUCT ABD12535

1. Ensure all surfaces to which the duct is to be mounted on are level and straight. If using Modular Corners, fit these before measuring to cut base.
2. Fix base sections to wall / bench using the score lines in both top & bottom channels.
**** Consideration should be given to installing outlet kits and making cable penetrations before fixing the duct to the wall.**
3. Adjoining duct sections can be aligned by using the clipped on cover across the joins.
4. To insert outlet mount boxes where required, cut the barrier to size down to the score line and snap off with snips (Skirtec recommends the use of Wiss Offset snips,M7). Mount Boxes can be inserted adjacent to each other and still maintain segregation. Straighten any distorted barrier section using pliers.
5. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets.

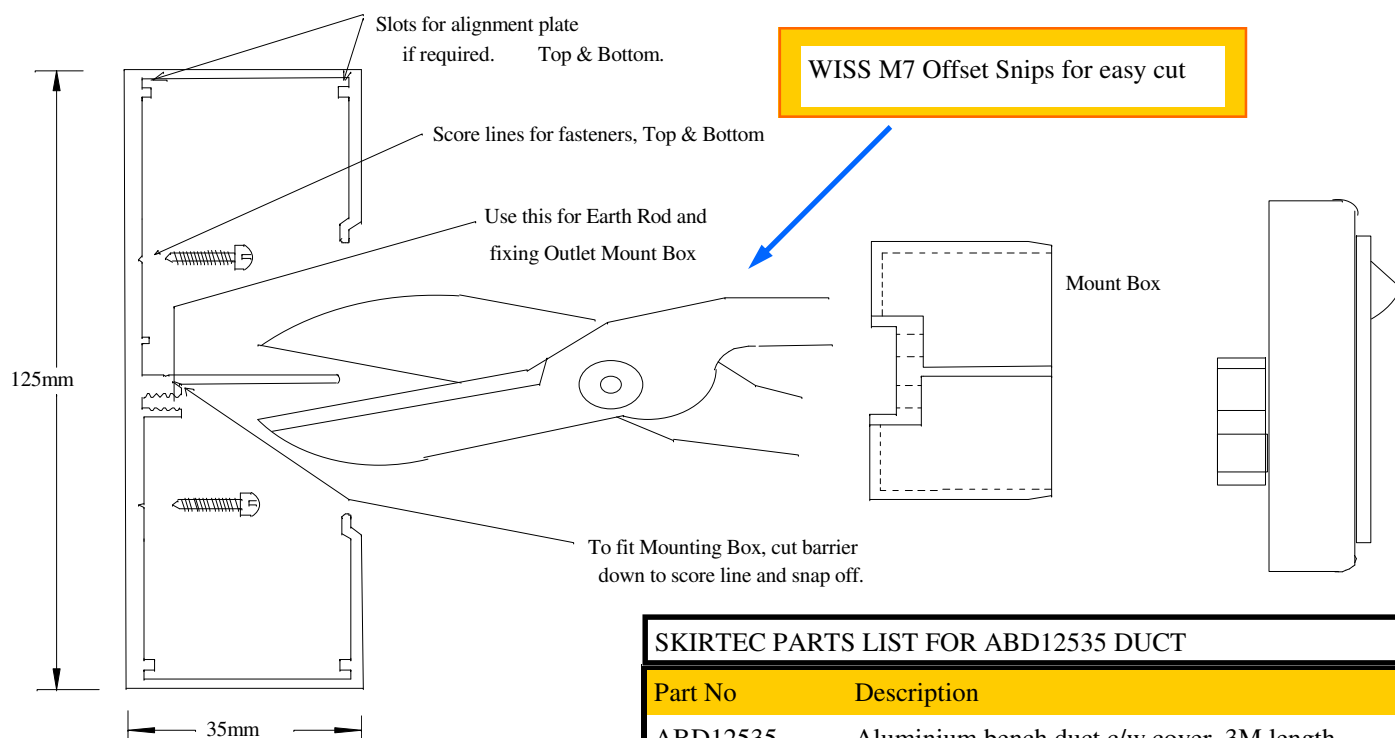

SKIRTEC PARTS LIST FOR ABD12535 DUCT

| Part No | Description |
|-------------|--|
| ABD12535 | Aluminium bench duct c/w cover, 3M length |
| ABD12535-MT | Outlet kit for standard grid plate (1) data or GPO |
| ABD12535ES | End Stop for bench duct, left or right. |
| ABD12535CNR | Modular corner, generally used as External. |
| SET UP | Powdercoat set up fee for Special Colours |
| Colours | Stock colours, clear anodised, grey, white birch |