




"Simply Better"

SKIRTEC GROUP PTY LTD
ACN 074 107 805
TEL 07 3375 6144
FAX 07 3375 6033
Email sales@skirtec.com.au
HELP LINE 1800 064 435

INSTALLATION INSTRUCTIONS

SKIRTEC 2 CHANNEL BENCH DUCT ABD10050

1. Ensure all surfaces to which the duct is to be mounted on are level and straight.
2. Fix base sections to wall / bench using fasteners along each side of the mounting channels at intervals of approximately 450mm. Liquid nails may also be used to increase mounted stability.
3. Butt base sections together ensuring alignment continuity of segregation channel and mounting channel. Use short sections of cover and/or sections of segregation to assist with alignment.
4. It is recommended that mount boxes are installed into chosen positions before the duct is segregated. Insert outlet mount boxes where required, with openings turned towards the appropriate cable channel (top or bottom), fastening to mounting channel using fasteners provided. Mount Boxes inserted adjacent to each other maintain segregation.
5. Measure off distances between mount boxes and cut and clip into place segregation as shown in the drawing below. If required installed segregation may be removed by snapping out of position as shown or alternatively, for small sections (the length of a mount box only), by cutting down to the mounting channel and drilling out the enclosed foot and snapping out the small section.
6. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets and butting cover under the outlet plate (fully covering cover ends).

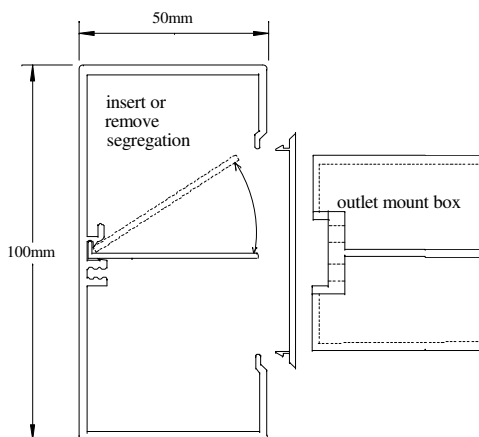

SKIRTEC PARTS LIST FOR ABD10050 DUCT

Part No	Description
ABD10050	Aluminium bench duct c/w cover, 3M length
ABD10050-MT	Outlet kit for standard grid plate (1) data or GPO
ABD10050ES	End Stop for bench duct, left or right.
SET UP	Powdercoat set up fee for Special Colours
Colours	Stock colours, clear anodised, grey, white birch