




*"Simply Better"*

SKIRTEC GROUP PTY LTD  
 ACN 074 107 805  
 TEL 1800 064 435  
 FAX 07 3375 6033  
 Email sales@skirtec.com.au  
 HELP LINE 1800 064 435

## INSTALLATION INSTRUCTIONS

### SKIRTEC 2 CHANNEL PVC DUCT APD12535 & 10050

1. Ensure all surfaces to which the duct is to be mounted on are level and straight.
2. Fix base sections to wall / bench using appropriate screw fasteners in both top & bottom channels. Adhesive such as "Liquid nails" may be used to provide a firmer fix to the wall surface.  
 \*\* Consideration should be given to installing outlet kits and making cable penetrations before fixing the duct to the wall.
3. Adjoining duct sections can be aligned by using the clipped on cover across the joins.
4. To insert outlet mount boxes where required, cut the barrier to size down to the score line with snips and tear off. Mount Boxes can be inserted adjacent to each other and still maintain segregation.
5. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets.
6. **Modular Corners** have retention tabs on both sides. Fit these at the same time as fitting the duct. For "Internal Corners" a simple butt / lap join may suffice.

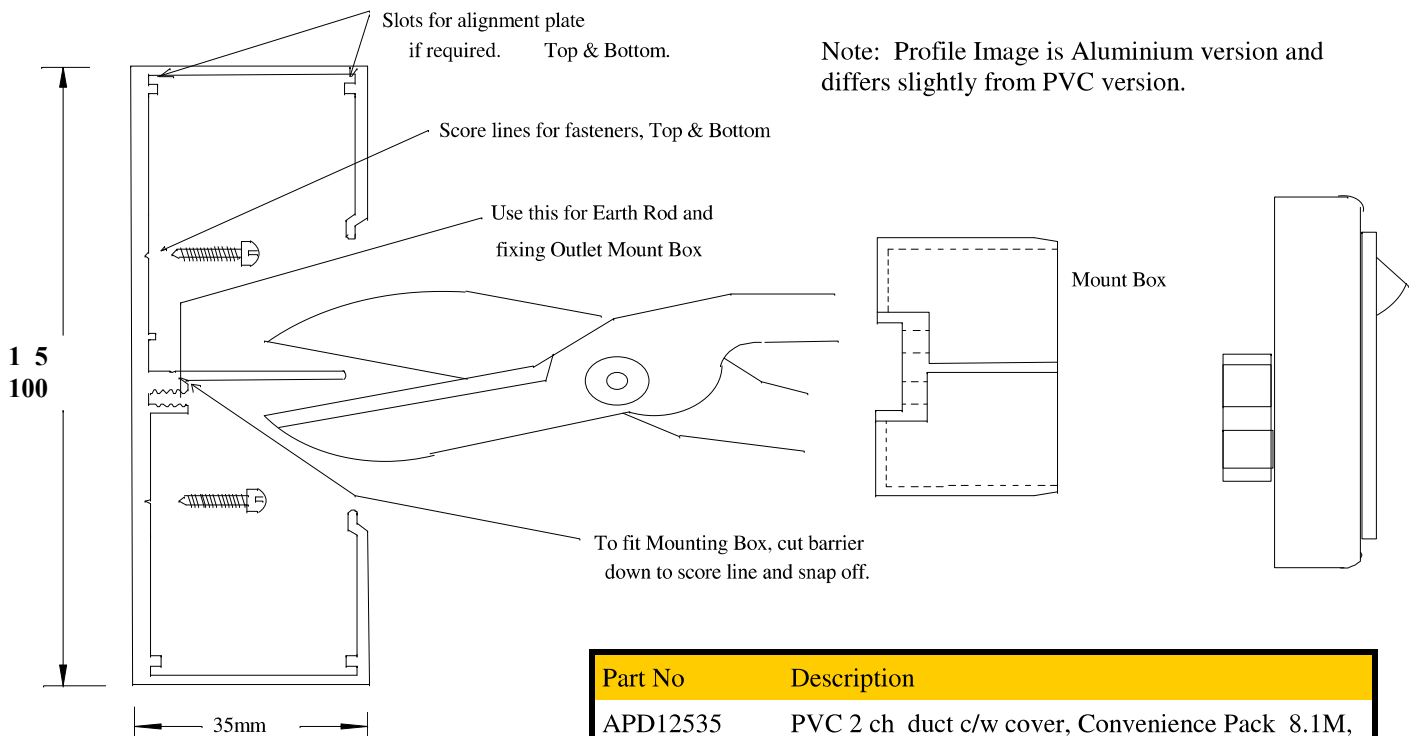

Part No	Description
APD12535	PVC 2 ch duct c/w cover, Convenience Pack 8.1M, Incl accessories pack
ABD12535KIT	Accessories Pack extra
Note: Accessories Pack contains 5 x Outlet Mount Kits, 2 x Modular Corners, 2 x End Stops	
Colours	Stock colours, Black or White