




*"Simply Better"*

## INSTALLATION INSTRUCTIONS


SKIRTEC GROUP PTY LTD  
ACN 074 107 805  
TEL 1800 064 435  
FAX 07 3375 6033  
Email sales@skirtec.com.au  
HELP LINE 1800 064 435

### SKIRTEC 2 CHANNEL PVC DUCT APD12535 & APD10050

1. Ensure all surfaces to which the duct is to be mounted on are level and straight.
2. Fix base sections to wall / bench using appropriate screw fasteners in both top & bottom channels.  
Adhesive such as "Liquid nails" may be used to provide a firmer fix to the wall surface.  
\*\* Consideration should be given to installing outlet kits and making cable penetrations before fixing the duct to the wall.
3. Adjoining duct sections can be aligned by using the clipped on cover across the joins.
4. To insert outlet mount boxes where required, cut the barrier to size down to the score line with snips and tear off. Mount Boxes can be inserted adjacent to each other and still maintain segregation.
5. Cable and fit off outlets. Fit cover sections as required, using short strips for between adjacent outlets.
6. **Modular Corners** have retention tabs on both sides. Fit these at the same time as fitting the duct.  
For "Internal Corners" a simple butt / lap join may suffice.

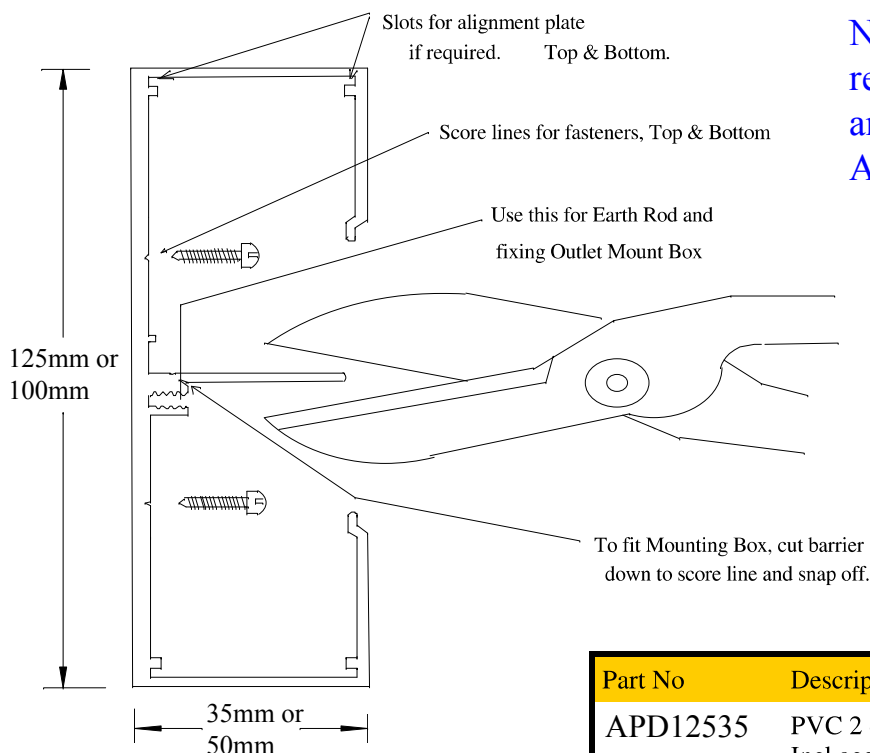

Note - line drawing and image are in respect APD12535 however design and installation approach for APD10050 is exactly the same.

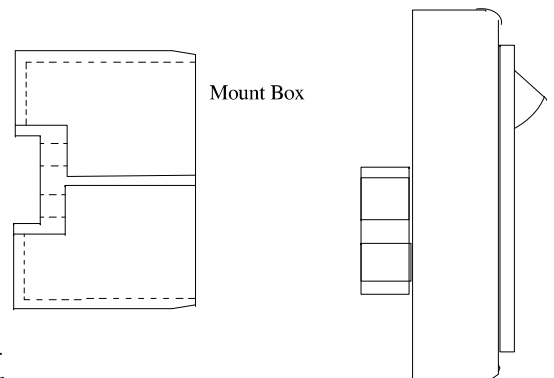

Part No	Description
APD12535	PVC 2 ch duct c/w cover, Convenience Pack 8.1M,
APD10050	Incl accessories pack
APD12535Kit	Additional accessories pack if required.
APD10050Kit	
Note: Accessories Pack contains 5 x Outlet Mount Kits, 2 x Modular Corners, 2 x End Stops	
Colours	Stock colours, Black or White